

Canon

EOS REBEL T3i EOS 600D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and playback images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T3i/EOS 600D Instruction Manual.



English

© CANON INC. 2011

CT1-1044-000

Quick Start Guide

- 1** **Insert the battery.**
- 2** **Insert a SD card.**
- 3** **Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.
- 4** **Set the lens focus mode switch to <AF>.**
- 5** **Set the power switch to <ON>, and set the Mode Dial to <A+> (Scene Intelligent Auto).**

- 6** **Flip out the LCD monitor.**
- 7** **Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
- 8** **Take the picture.**
Press the shutter button completely to take the picture.
- 9** **View the image.**
The captured image will be displayed for approx. 2 sec. on the LCD monitor.

- The ☆ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, A-DEP).
- Battery Life with viewfinder shooting**


Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots

Image Playback

Index
Magnify
Select image
Playback
Erase
INFO. Shooting information

Preparation

Menu Operations

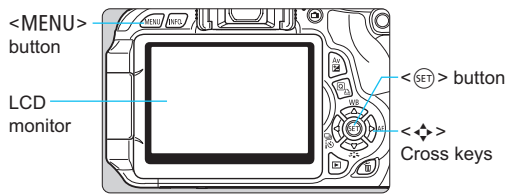

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select a tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.


Basic Zone Modes



Movie Shooting Mode




Creative Zone Modes

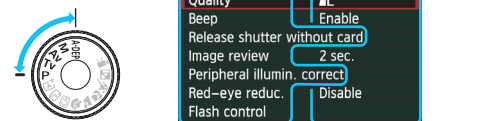

Menu items Menu settings

Image-recording Quality

- Select [Quality], then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

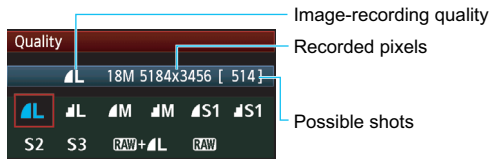

Picture Style ☆

- Press the <◀▶> button.
- Press the <◀▶> key to select the Picture Style, then press <SET>.




Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Neutral> (Neutral) and <Faithful> (Faithful), see the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

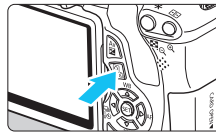

Basic Zone Modes



Creative Zone Modes



Shutter speed
 Aperture
 Highlight tone priority
 ISO speed
 Flash exposure compensation
 Auto Lighting Optimizer
 Metering mode
 Shutter speed
 Drive mode
 Exposure compensation/AEB setting
 Picture Style
 AF mode
 White balance

- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <◀▶> key to select a function, then turn the <◀▶> dial to set it.

Custom Functions ☆

C.Fn I: Exposure

- Exposure level increments
- ISO expansion
- Flash sync. speed in Av mode

C.Fn II: Image

- Long exposure noise reduction
- High ISO speed noise reduction
- Highlight tone priority

C.Fn III: Autofocus/Drive



- AF-assist beam firing
- Mirror lockup

C.Fn IV: Operation/Others


- Shutter/AE lock button
- Assign SET button
- LCD display when power ON

Shooting Operation


Nomenclature

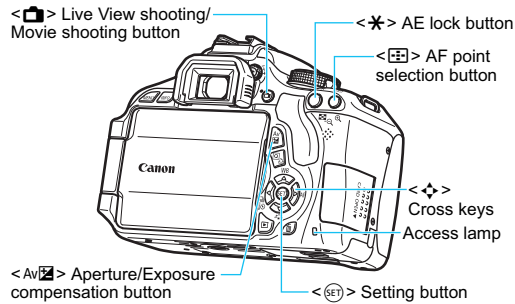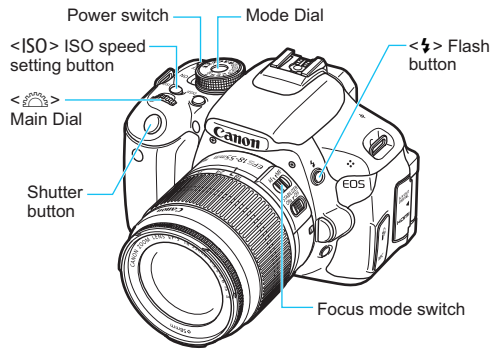

Shooting Settings Display

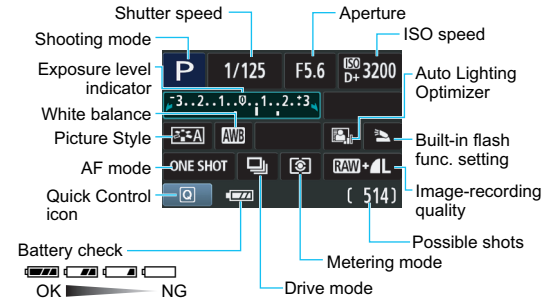

Viewfinder Information

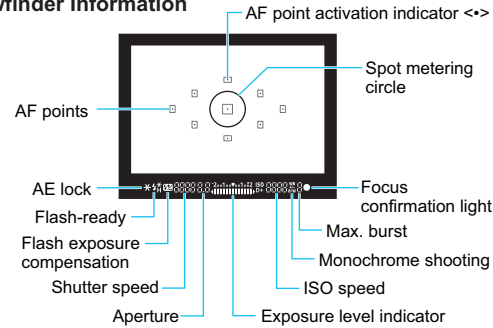

Basic Zone Modes



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Scene Intelligent Auto
- Flash Off
- Creative Auto
- Portrait
- Landscape
- Close-up
- Sports
- Night Portrait

Pressing the **<Q>** button will display the Quick Control screen. In the **[CA]/[S]/[M]/[S]/[B]/[A+]** shooting mode, press the **<Δ/∇>** key to select the function, then press the **<◀/▶>** key or turn the **<A+>** dial to set it as desired.


Using the Built-in Flash

Basic Zone Modes

If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the **[CB]>** **<A+>** **<S>** **** modes).

Creative Zone Modes

Press the **<A+>** button to raise the built-in flash, then shoot.

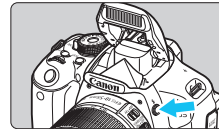

Creative Zone Modes



You can change the camera settings as desired to shoot in various ways.

P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the **<A+>** mode.

- Set the Mode Dial to **<P>**.

Tv: Shutter-priority AE




- Set the Mode Dial to **<Tv>**.
- Turn the **<A+>** dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the **<A+>** dial until it stops blinking.

Av: Aperture-priority AE




- Set the Mode Dial to **<Av>**.
- Turn the **<A+>** dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the **<A+>** dial until it stops blinking.

AF: AF Mode

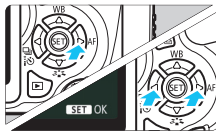

 - Set the lens focus mode switch to **<AF>**.
- Press the **<AF>** button.
- Press the **<Δ/∇>** key or turn the **<A+>** dial to select the AF mode, then press **<SET>**.




- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF mode automatically
- AI SERVO (AI Servo AF):** For moving subjects


AF Point




- Press the **<AF>** button.

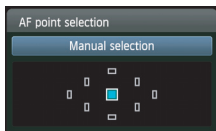


- Press the **<Δ/∇>** key to select the AF point.
- While looking through the viewfinder, you can select the AF point by turning the **<A+>** dial until the desired AF point flashes in red.
- Pressing **<SET>** toggles the AF point selection between the center AF point and automatic AF point selection.

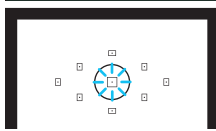


ISO: ISO Speed

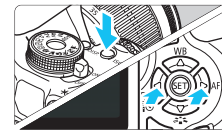


- Press the **<ISO>** button.
- Press the **<Δ/∇>** key or turn the **<A+>** dial to select the ISO speed, then press **<SET>**.
- When **[AUTO]** is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.

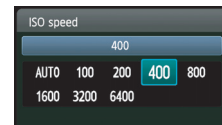

Drive Mode

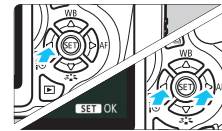

- Press the **<A+>** button.
- Press the **<Δ/∇>** key or turn the **<A+>** dial to select the drive mode, then press **<SET>**.

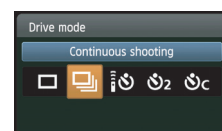


- : Single shooting
- : Continuous shooting
- ⌚**: Self-timer:10 sec/Remote control*
- ⌚**: Self-timer:2 sec
- ⌚**: Self-timer:Continuous*

* The **<A+>** and **<C>** drive modes can be selected in all shooting modes (except **<M>**).

Live View Shooting



- Press the **<Live View>** button to display the Live View image.

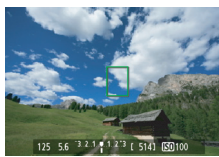

- Press the shutter button halfway to focus.



- Press the shutter button completely to take the picture.

- Live View shooting settings will appear under the **[Q]** menu tab in Basic Zone modes and under the **[Q]** menu tab in Creative Zone modes.

Battery Life with Live View Shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots

Shooting Movies




- Set the Mode Dial to **<M>**.



- Press the shutter button halfway to focus.



- Press the **<Live View>** button to start shooting a movie.

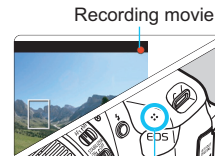

- To stop movie shooting, press the **<Live View>** button again.

Recording movie

